


Bellissimo/Bellfree Multi-way video entry system with 1 Call panel and inner and outer entrances and coded access - additional wiring

Part 1 of 2

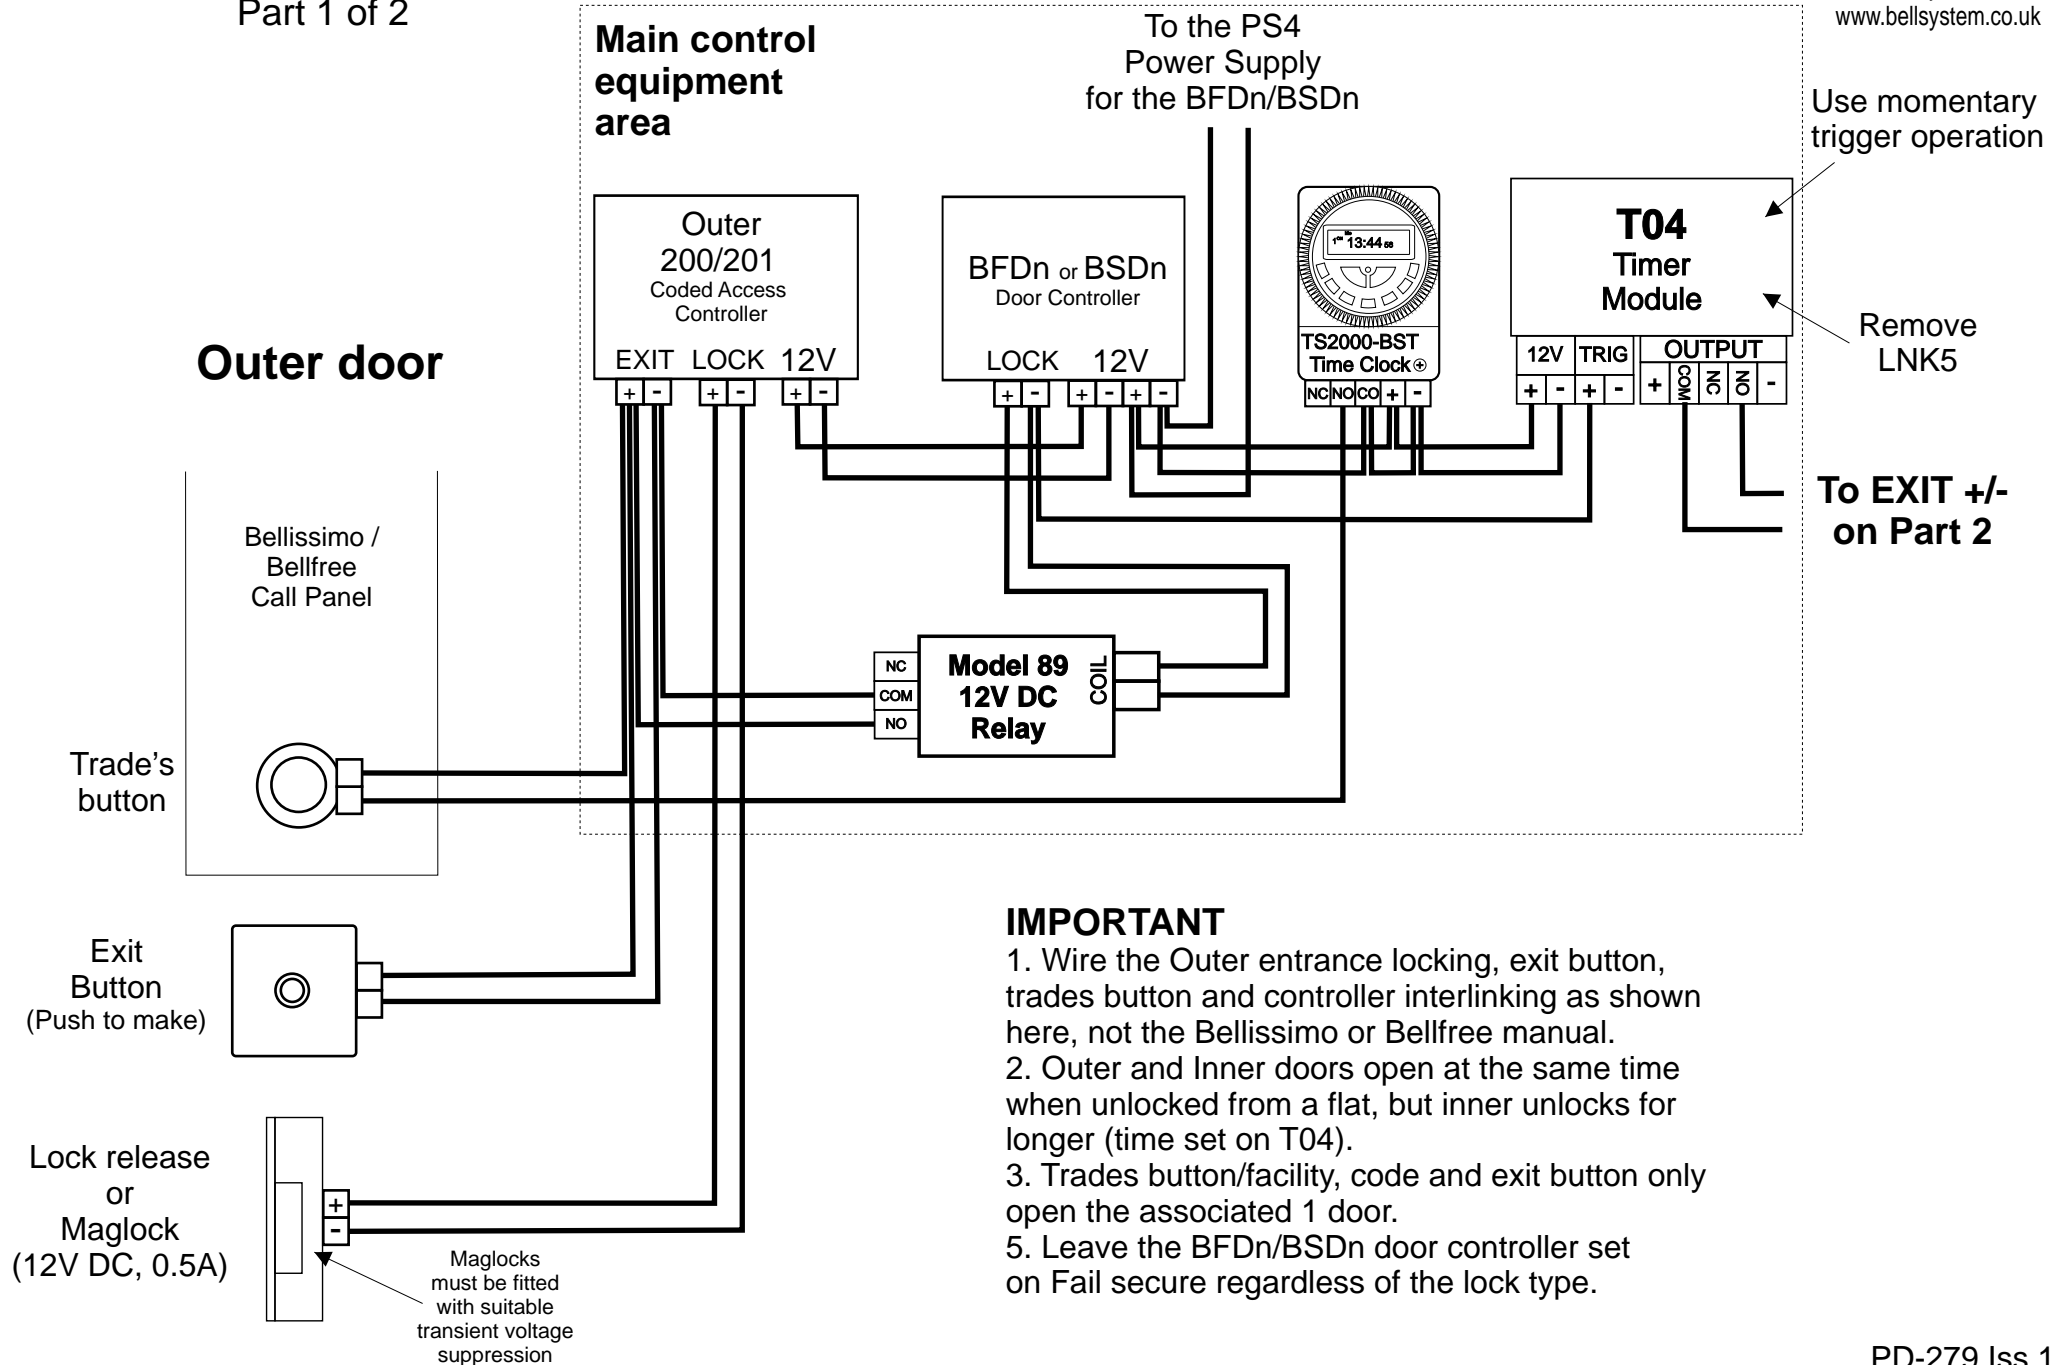

IMPORTANT

1. Wire the Outer entrance locking, exit button, trades button and controller interlinking as shown here, not the Bellissimo or Bellfree manual.
2. Outer and Inner doors open at the same time when unlocked from a flat, but inner unlocks for longer (time set on T04).
3. Trades button/facility, code and exit button only open the associated 1 door.
5. Leave the BFDn/BSDn door controller set on Fail secure regardless of the lock type.

Bellissimo/Bellfree Multi-way video entry system with 1 Call panel and inner and outer entrances and coded access - additional wiring

Part 2 of 2

