

# User Guide, tabellet Apartment Station



## Talk Button

Blue Flashing – Touch to start talking

Blue Steady – Indicates Speech is active



## Camera Button

Blue Flashing – Touch to view the entrance, without speech

Yellow Steady – Touch to change the camera view (if available)



## Mute Button

Touch to turn the ringer ON or OFF

Red Steady – Indicates Mute is ON: The ringer is silenced but the talk & camera buttons will still flash to indicate a call.<sup>1</sup>



## Key Button

Green Flashing – Touch to release the entrance door

Red – Indicates the entrance door has been left open

<sup>1</sup>If a local Doorbell is installed, this will not be affected by the Mute function

# tabellet User Guide (PD-301 issue 2)

## Introduction

The tabellet is a hands-free video apartment station for use with the bell*free* door entry system. The unit has a 7" LCD display with 4 touch buttons on the right hand side.

## Adjustment Controls

The user can adjust the display contrast, display brightness and the ringer volume using the touch controls and an on screen menu. To activate the controls during a call, touch and hold the Mute and Camera buttons at the same time; after 3 seconds all four buttons will be illuminated and the control graphics will appear on the display; The controls can also be activated while the unit is Idle (display blank) but there is no picture to see the effect of the adjustments

## On Screen Display

The menu consists of a two panels, one to label the touch controls on the right-hand side and the other at the bottom, displaying the adjustment sliders:

**Down Arrow:** select an adjustment slider (highlighted Yellow)




**Right Arrow:** increases the value of the selected slider



**Left Arrow:** decreases the value of the selected slider



**Large X:** save the settings and turn off the controls

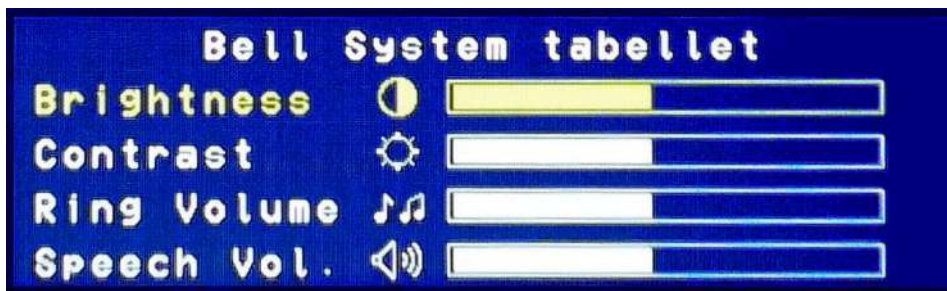

When adjusting the ring volume a short ring is given each time it is increased or decreased to give an audible indication of the volume.