CS109-n/VR Series System Operation Guide

Coded access keypad
Enter the appropriate code to unlock the entrance.

Green LED
Flashes on each number press and stays on while the entrance is unlocked

Red LED
Indicates a duress/alarm code has been entered.

Call buttons
Press the appropriate button and wait for a reply. A reassurance tone will be heard.

Trades button (optional)
For Postman and deliveries. Press during the allocated time to unlock the entrance.

Microphone

Speaker
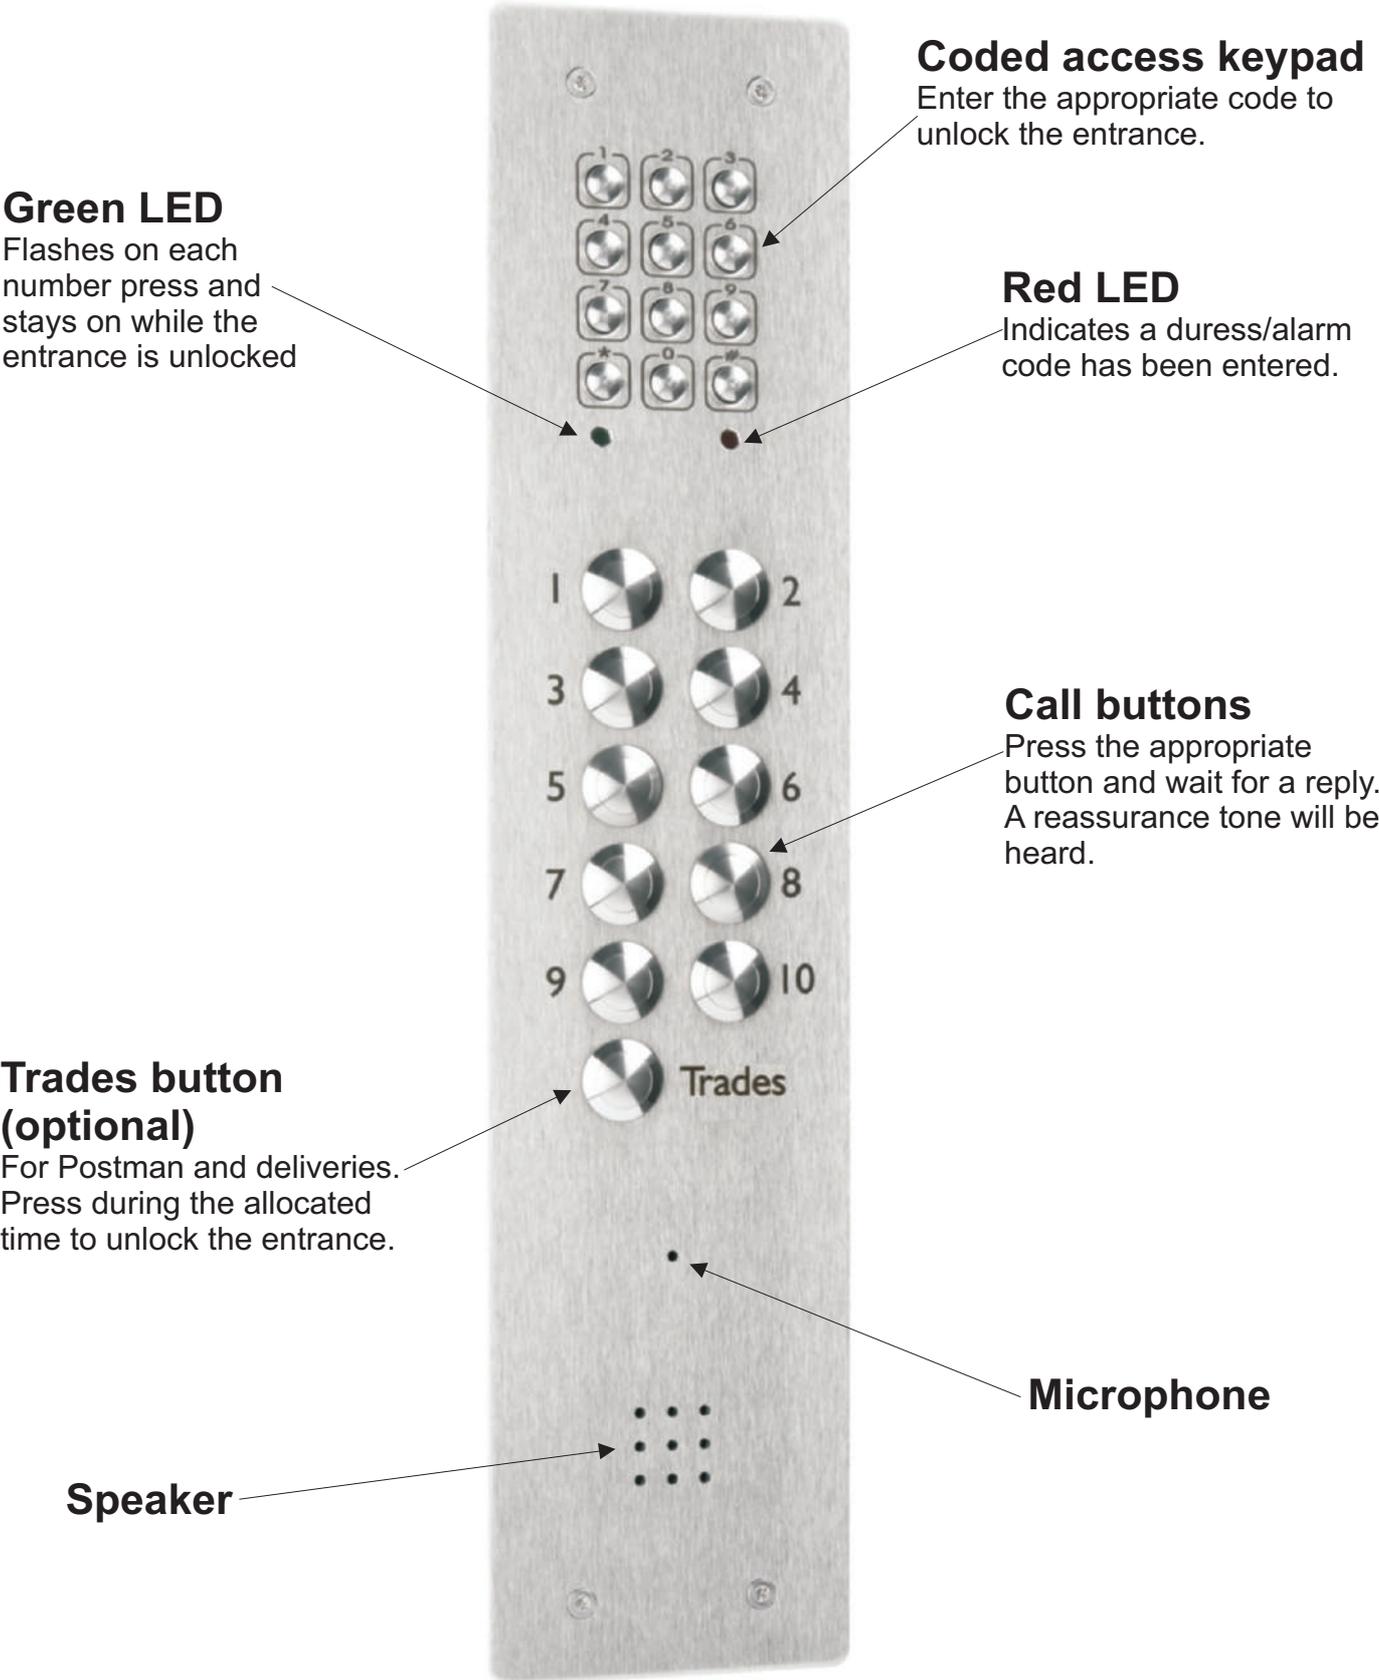
801 Audio Telephone

Key button
This button unlocks
the entrance